


URUTU AIR BOX LID & VANITY PLATE AUDI R8 2009-2012 (V8 & V10)

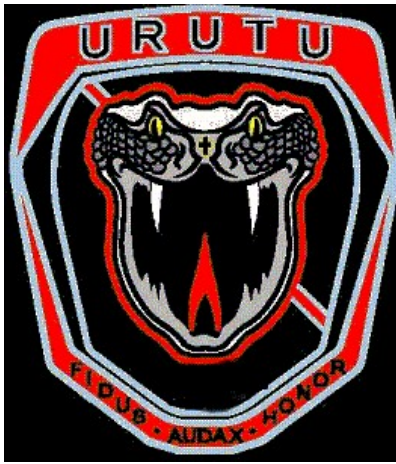

INSTALLATION INSTRUCTIONS

Required Tools:

- Electric drill and/or hex-bit driver
- T25 hexagonal bit
- Small Flashlight (Optional)


- 1) Remove the vanity V8-V10 FSI plate by pulling upwards and away from the engine (this step is required even if you are only replacing the air box cover in order to access two of the screws that reside under the vanity plate), if only replacing the vanity plate skip to numeral 5,6 & 7)



- 2) Using the Hex-bit driver and/or electric drill and T25 hex-bit remove the 10 screws that secure the lid to the air box and remove it by lifting it upwards and away from the airbox assembly.




- 3) Position the URUTU lid on the air box and ensure the edge of both air filters goes into the curved cavity of the lid, then make sure all the screw holes on the lid and the bottom section of the air box are fully aligned

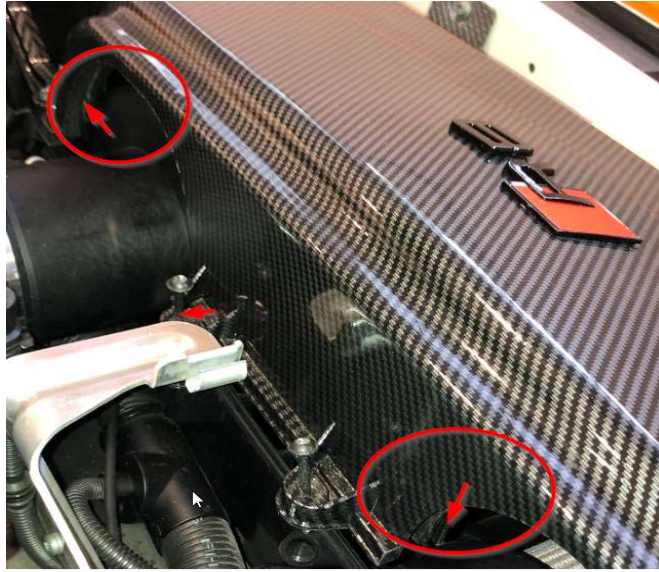

- 4) Start driving the screws into place, but do not fully torque until you have ensured the lid is properly seated and making full contact with the bottom section of the air box (if using a power drill be careful not to let the rotating part of the drill make contact with the lid or damaged can be caused). Lastly, be careful not over torque the screws otherwise you might strip the tread on the bottom section of the airbox.



- 5) Secure the vanity plate in place by aligning the rear tab (the single one closest to the air box) with the receiving metal bracket, then align the two other tabs

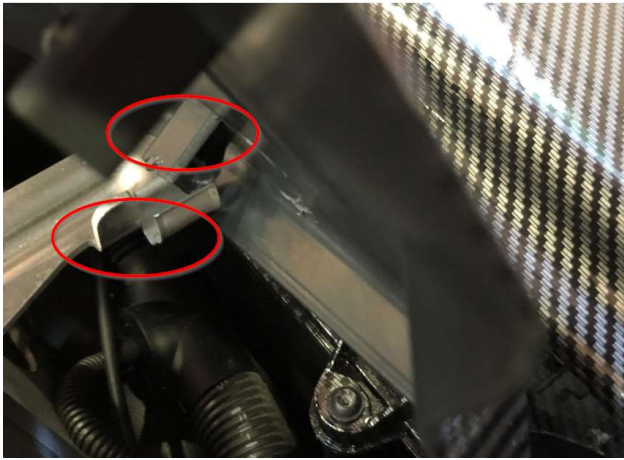

- 6) Press the vanity plate firmly into place



- 7) End

